

To reset the dimmer CPU, follow these steps:

1. Turn off the power to the dimmer pack.
2. Remove the six screws from the front panel and tilt it towards you so you can see the back of it, but not so far that the wires come unplugged.
3. Short the two P4 pins on the back of the front panel with a shunt (or a screwdriver or other metal object if no shunt is available). The pins are just below the left side of the heat sink which may still be very hot.
4. Power up the dimmer.
5. Wait 5 to 10 seconds before removing the short across the two P4 pins.

The dimmer CPU should now be reset.

