


ETC® Product Update

Source Four® Lens Tube Configuration



ETC has improved our lens identification and configuration method for assembling the lens tubes of Source Four ellipsoidal spotlights. Our new system now accounts for Source Four Enhanced Definition Lens Tubes (EDLT) as well as original lens tubes. All lens tube castings are now manufactured to hold either original or Enhanced Definition lenses.

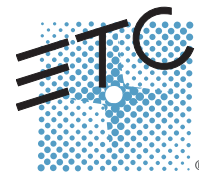


Note:

*The information in this document supersedes information in the **Source Four User Manual** and the **Source Four Assembly Guide**. When assembling the lens tube for your Source Four ellipsoidal spotlight, refer to this document for lens identification and placement.*

Lens Positions

ETC has added an additional position in the barrel casting for lens placement. We also have added color-coding for all lens positions. For any lens position, only lenses bearing *at least one dot* of the indicated color should be placed in that position.

Lens position color codes are shown below. Beneath each color you will also find the actual text as shown within the lens tube, indicating both the color and degree lenses that can occupy that position.

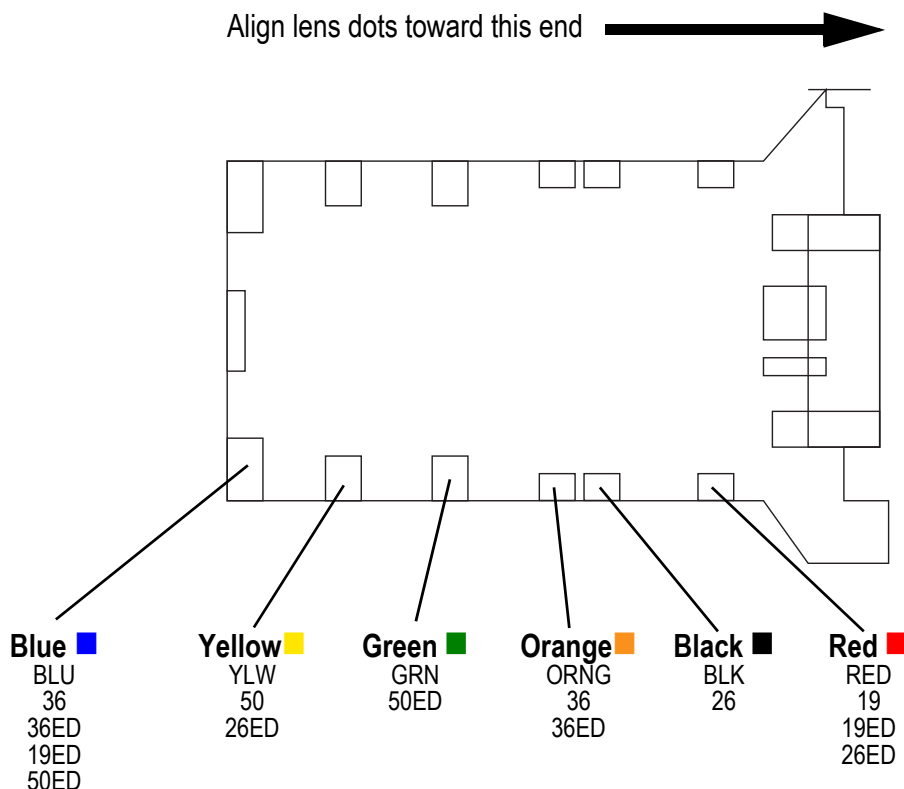

* "ED" refers to Enhanced Definition lenses

(additional lens configuration information on reverse)



Corporate Headquarters ■ 3031 Pleasant View Road, P.O. Box 620979, Middleton, Wisconsin 53562-0979 USA ■ Tel +608 831 4116 ■ Fax +608 836 1736
London, UK ■ Unit 26-28, Victoria Industrial Estate, Victoria Road, London W3 6UU, UK ■ Tel +44 (0)20 8896 1000 ■ Fax +44 (0)20 8896 2000
Rome, IT ■ Via Pieve Torina, 48, 00156 Rome, Italy ■ Tel +39 (06) 32 111 683 ■ Fax +44 (0) 20 8752 8486
Holzkirchen, DE ■ Ohmstrasse 3, 83607 Holzkirchen, Germany ■ Tel +49 (80 24) 47 00-0 ■ Fax +49 (80 24) 47 00-3 00
Hong Kong ■ Rm 1801, 18/F, Tower 1 Phase 1, Enterprise Square, 9 Sheung Yuet Road, Kowloon Bay, Kowloon, Hong Kong ■ Tel +852 2799 1220 ■ Fax +852 2799 9325
Service: (Americas) service@etcconnect.com ■ (UK) service@etcconnect.com ■ (DE) techserv-hoki@etcconnect.com ■ (Asia) service@etcconnect.com
Web: www.etcconnect.com ■ Copyright © 2010 ETC. All Rights Reserved. ■ Product information and specifications subject to change.
7060M4100 ■ Rev B ■ Released 2010-10 ■ ETC intends this document to be provided in its entirety.

ETC Quick Guide

Source Four Lens Tube Configuration


Lens Markings

All Source Four lenses now have color-coded dots for identification. Normal lenses have a single dot of color. Enhanced Definition lenses have a combination of white dots and color dots.

Lens color coding is illustrated below.


Standard Lenses

19°

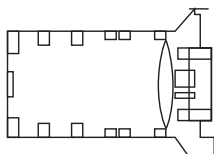


Lens - Red Dot

26°

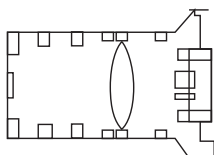


Lens - Black Dot

36°

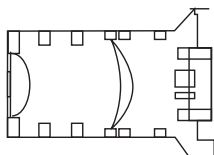

Rear lens - Blue dot
Front lens - Orange dot


50°

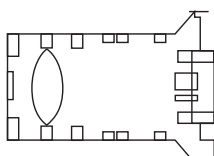

Lens - Yellow Dot


Enhanced Definition Lenses

19° ED

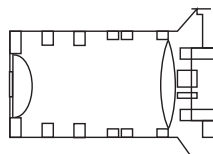


Rear lens - 1 white dot & 1 blue dot
Front lens - 1 white dot & 1 red dot

26° ED

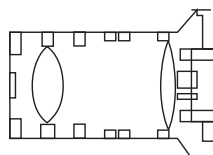


Rear lens - 1 white dot & 1 yellow dot
Front lens - 1 white dot & 2 red dots

36° ED

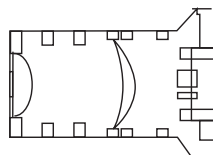

Rear lens - 1 white dot & 2 blue dots
Front lens - 1 white dot & 1 orange dot

50° ED

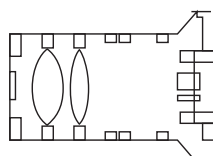

Rear lens - 1 white dot & 3 blue dots
Front lens - 1 white dot & 1 green dot

➡ Align lens dots toward this end ➡

For maximum gel life with specific lens tubes refer to the tables below:

Lens Tube	Soft Focus Tube Back	Sharp Focus	Soft Focus Tube Forward
19°	✗	✓	✓
26°	✗	✓	✓
36°	✓	✓	✗
50°	✗	✓	✓
✓ = Better gel life ✗ = Worse gel life			

ED Lens Tube	Soft Focus Tube Back	Sharp Focus	Soft Focus Tube Forward
19° ED	✗	✓	✓
26° ED	✓	✓	✗
36° ED	✓	✓	✗
50° ED	✓	✓	✗
✓ = Better gel life ✗ = Worse gel life			

For lens tube assembly procedures, please refer to the Source Four Assembly Guide.